


**ИНСТРУКЦИЯ ПО НАСТРОЙКЕ**

$$q_v = k \times \sqrt{\Delta p_m}$$

TINO		k				
		100P	125P	125	160	200
X*Y		12*37=444	12*37=444	17*38=646	23*47=1081	29*55=1595
Suljettu riviä Stängda rad Closed rows	0	3,8	3,8	5,6	9,2	14,2
	2	3,2	3,2	4,9	8,4	13,2
	4	2,5	2,5	4,3	7,6	12,2
	6	1,9	1,9	3,6	6,8	11,3
	8	1,3	1,3	2,9	6	10,3
	10	0,6	0,6	2,3	5,2	9,3
	12			1,6	4,4	8,3
	14				3,6	7,3
	16				2,8	6,4
18					5,2	

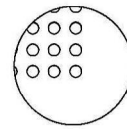

TINOq		k		
		100	125	160
A		13*30=390	16*39=624	21*50=1050
Suljettu riviä Stängda rad Closed rows	2	3,7	5,9	9,5
	4	3,2	5,2	8,6
	6	2,6	4,4	7,7
	8	2,0	3,7	6,8
	10	1,4	3,0	5,9
	12	0,9	2,2	5,0
			1,5	4,1

